

# Wersal



Referencia	Artículo	Uds. por caja
51320-2269	Bajo Plato 32 cm.	12
53305-2243	Plato Llano 30,5 cm.	12
52305-1250	Plata Hondo 30,5 cm.	12
52225-2220	Plato Hondo 22,5 cm.	24
53240-2234	Plato Llano 24 cm.	24
53270-2238	Plato Llano 27 cm.	12
53210-2231	Plato Postre 21 cm.	24
53170-2228	Plato Pan 17 cm.	24



57012-2217	Ensaladera 12 cm.	24
57016-2216	Ensaladera 16 cm.	24
57018-2218	Ensaladera 18 cm.	24
57021-2221	Ensaladera 21 cm.	24



Referencia	Artículo	Uds. por caja
135130-2472	Platillo 13 cm.	36
135145-2427	Platillo 14,5 cm.	36
135165-2428	Platillo 16,5 cm.	36
137080-2470	Taza 0,08 L.	36
137100-2480	Taza 0,10 L.	36
137160-2401	Taza 0,16 L.	36
137190-2407	Taza 0,19 L.	36
137220-2406	Taza 0,22 L.	36
137320-2209	Taza 0,32 L.	24
137300-2417	Taza Consomé 0,32 L.	24
137014-2424	Bowl 14 cm.	24

143300-0364	Sopera 3,00 L.	4
-------------	----------------	---



Referencia	Artículo	Uds. por caja
54210-2233	Rabanera 21 cm.	24
54170-1202	Rabanera 17 cm.	24
54240-2256	Fuente 24 cm.	12
54280-2257	Fuente 28 cm.	12
54320-2260	Fuente 32 cm.	12
54360-2262	Fuente 36 cm.	12



55030-2273	Cafetera 0,30 L.	12
55075-2274	Cafetera 0,75 L.	12
56005-2203	Lechera 0,05 L.	
56015-2204	Lechera 0,15 L.	24
56030-2205	Lechera 0,30 L.	24
55400-2222	Tetera 0,40 L.	12
55440-0051	Filtro Tetera	